






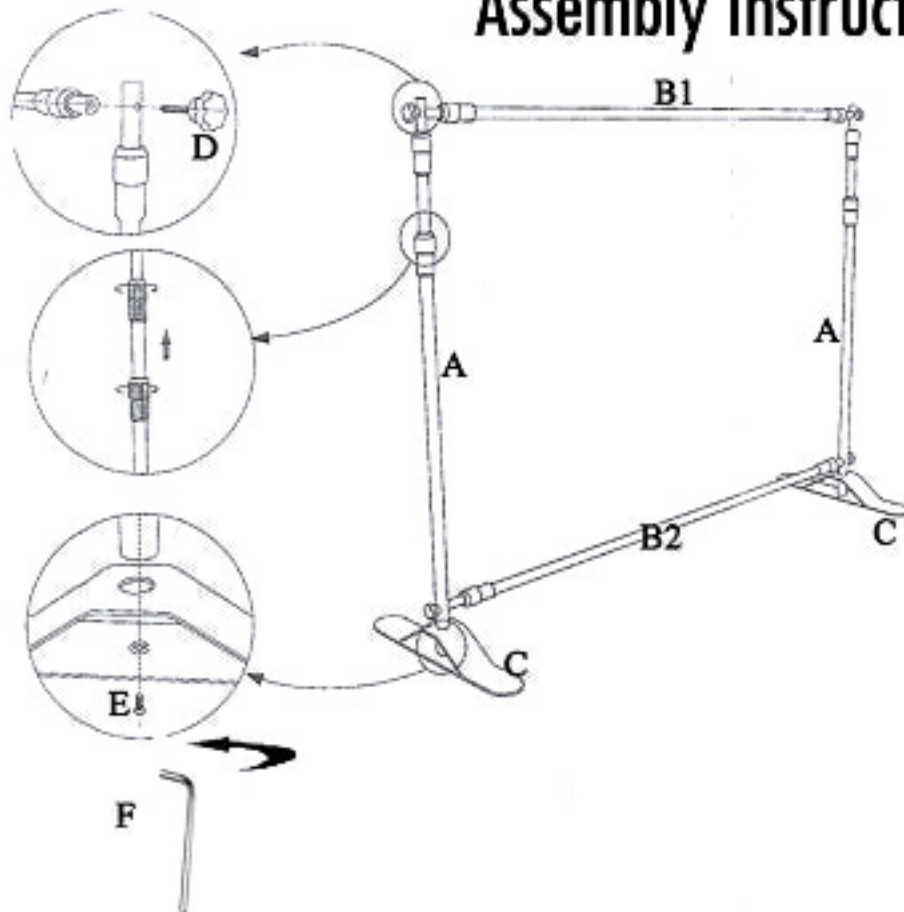

# Telescopic Adjustable Banner Stand Assembly Instructions

*Printer's Cove*



	<b>2 x A</b>
	<b>2 x B1</b>
	<b>2 x B2</b>
	<b>2 x C</b>
	<b>4 x D</b> <b>2 x E</b>
	<b>1 x F</b>



## When assembling 10x8, 8x8 banner stand:


Align and tighten each part of the B1 & B2 poles to the silver line indicated. If you extend the pole beyond the silver line, the stand will not be as stable or sturdy. Do not overtighten the locking nuts as doing so will cause the locking nut to crack.



## For 10' x 8' Banner Stands Only

If you purchased a 10' x 8' banner stand, you will receive an extra pole that supports the middle of the stand.

Place the "U" shaped end through the 2" cut of your polepocket to attach to the top horizontal pole.

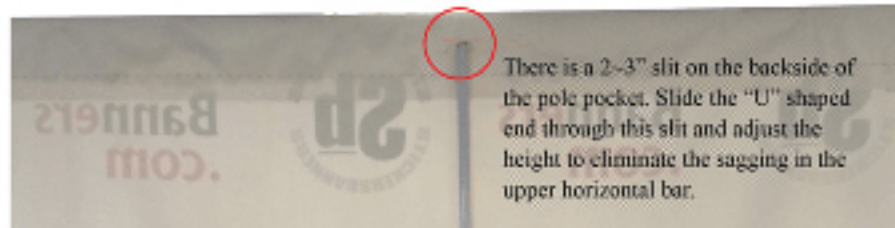

There is a 2-3" slit on the backside of the pole pocket. Slide the "U" shaped end through this slit and adjust the height to eliminate the sagging in the upper horizontal bar.